

Acrylic Prints Fitting Instructions

Acrylic prints are hung using four polished chrome supports located in the four corners of the acrylic. You only actually need to fix 2 of them to the wall.

The supports are made up of two parts, the base of the support is screwed into the wall, the second part goes through the hole in the corner of the acrylic and screws into the base. The acrylic is sandwiched between the two parts of the fixing, supporting the print slightly away from the wall.

Step 1

Only the top 2 fixings need to be fixed to the wall. Mark the centres of the positions of the top 2 aluminium fixings on the wall where the acrylic is to be hung.

Step 2

Using a relevant drill bit, carefully drill 2 holes in the positions indicated on the wall.

Step 3

Insert a wall plug in each of the 2 holes drilled.

Step 4

Unscrew the top two supports only into two parts.

Screw the base of each support into the 2 holes in the wall.

Step 5

Ideally two people are needed for this stage.

One person, lift the print towards the fixings on the wall being careful to locate the holes in the print against the support bases in the wall. Be careful not to scratch the back of the print against the wall or the supports.

The second person can now place the other part of each fixing through the panel and screw it into its base, sandwiching the print between each part of the supports.